



Thank you for purchasing a brand new E.T.M.-I™ Emergency Transportation Vehicle Insert Module from Express Custom trailer Mfg. Inc., Please find your installation guide on the back of this sheet and hardware kit included in this package.

In the event of an emergency, your E.T.M.-I™ has been engineered\* and tested for safe for medic and patient transport\*\* and is CMVSS/FMVSS certified for highway use\*\*\*.

- A) TC TSD 205 – Glazing Materials
- B) TC TSD 206 – Door Locks and Door Retention Components
- C) TC TSD 207 – Anchorage of Seats
- D) TC TSD 208 – Occupant Restraint Systems in Frontal Impact
- E) TC TSD 209 – Seat Belt Assemblies
- F) TC TSD 210 – Seat Belt Anchorages
- G) TC TSD 220 – Rollover Protection
- H) TC TSD 302 – Flammability



#### Notes:

\*The ETM-I™ must be installed according to the installation guide.

\*\* The end user is responsible to fulfill all local OHS requirements, for example: a first aid kit, an O2 bottle, a valid fire extinguisher, air temp, blankets, etc.

\*\*\*The ETM-I™ must not be installed in a vehicle exceeding a curb weight of 3650kgs (8000lbs). (For reference, a Ford F550 Crew Cab has a curb weight of 7,995lbs)


If you need any assistance with the installation of your E.T.V, or have any questions, please contact us:

**1-800-688-6840 | email@expresscustom.com**

Monday - Friday, 8:00AM-4:30PM

**\*\*IMPORTANT\*\*:** YOU MUST FOLLOW THESE INSTRUCTIONS IN ORDER TO BE WORKSAFEBEC & TRANSPORT CANADA COMPLIANT.

**\*\*IMPORTANT\*\*:** BE SURE TO CHECK THE UNDER-SIDE OF THE TRUCK BED BEFORE DRILLING ANY HOLES. EXPRESS CUSTOM IS NOT LIABLE FOR ANY DAMAGES CAUSED BY IMPROPER INSTALLATION.

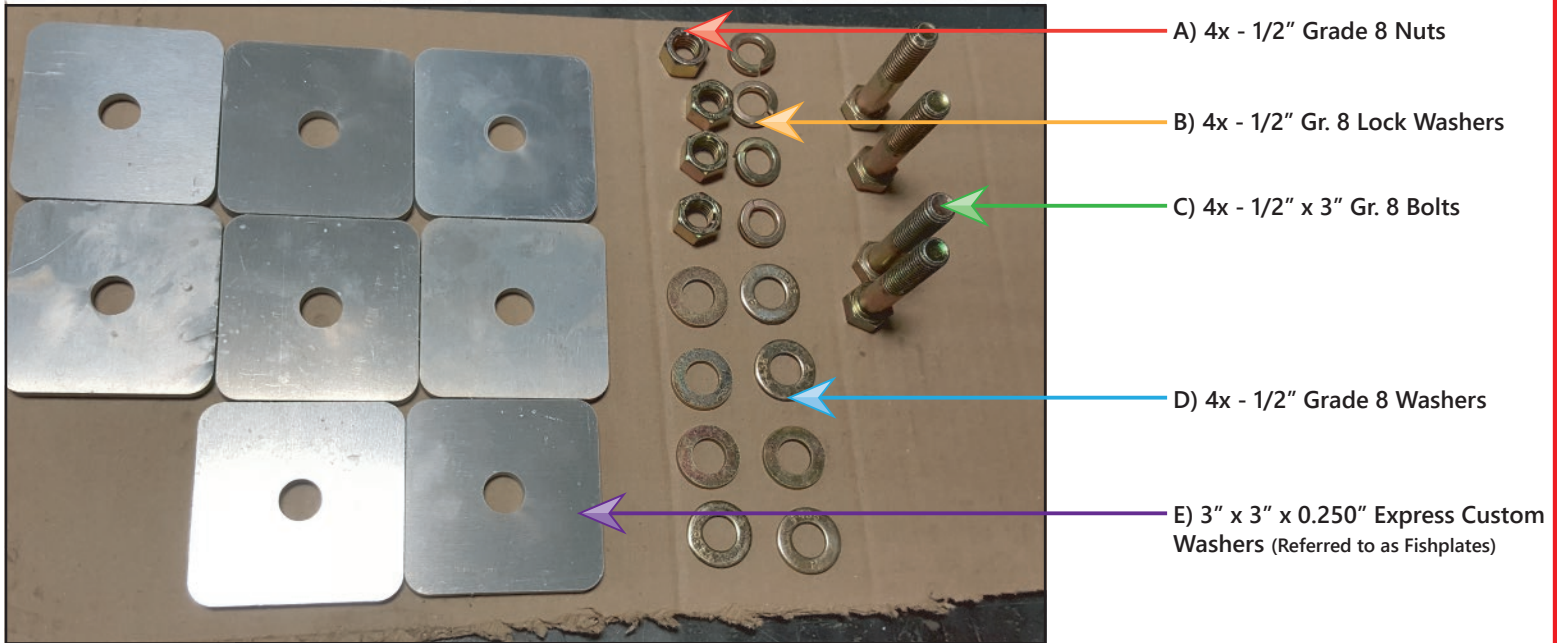


(Fig. 1 : The hardware included with our E.T.V. unit)


**Step 1) Load E.T.V. unit inside pick-up bed. Position E.T.V. unit against bulkhead.**




**Step 2) Center E.T.V. in pick-up bed**

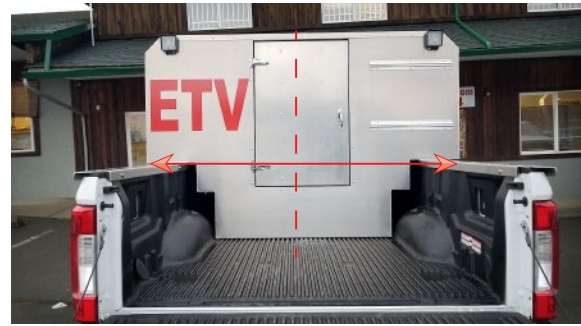

**Step 3) Drill four 1/2" holes through the floor of the E.T.M.-1 & the pick-up floor, using the already piloted holes partially cut into the floor of your E.T.M.-1**

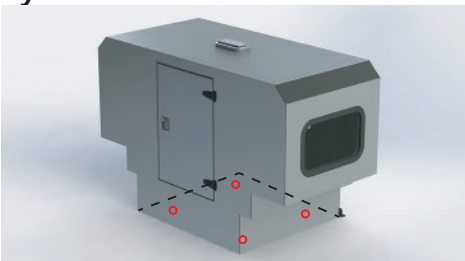

**Step 4) Bolt down the E.T.V. unit with our supplied hardware through the four new holes. Put a fishplate on both sides of the bolt.**

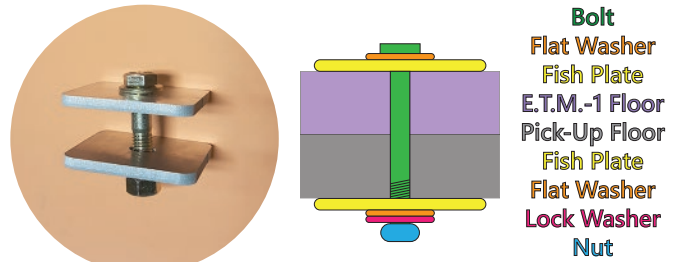

**Got Questions?**  
**Need assistance?**  
**Contact us.**

1-800-688-6840 Monday-Friday 8:00AM-4:30PM  
 email@expresscustom.com

**Done! You have successfully installed your E.T.V. unit and are compliant.**

EXPRESS CUSTOM MFG.  
 1365 ALBERNI HIGHWAY  
 PARKSVILLE, B.C.  
 V9P 2B9